

SPARE PARTS LIST

MODEL NO. DGA452

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	*****	*****	***	*****
002	317821-6	[1] POKRYWA OBUDOWY PRZEKLADNI do 9554-58NB	1	
003	213445-5	[1] ORING	1	
004	961005-4	[1] ZEGER	1	
005	*****	*****	***	*****
006	227501-5	[1] KOLO ZEBATE 19 do BGA452	1	
007	417771-6	[1] POKRYWKA do MT952/3	1	
008	233072-2	[1] SPREZYNA SCISKAJACA, 9541/9542	1	
009	*****	*****	***	*****
010	213960-9	[1] O-RING 5 do 9554-58NB	1	
011	256496-5	[1] SZTYFT 4 do BGA452	1	
012	318051-2	[1] OBUDOWA PRZEKLADNI do BGA452	1	
013	263002-9	[1] KOLEK GUMOWY SR1800/41KB/JS1650/9901	1	
014	210033-9	[1] LOZYSKO KULKOWE 696ZZ	1	
015	961052-5	[1] ZEGER 12	1	
016	253744-3	[1] PODKLADKA 12 LS 1000/20/1430/40	1	
017	227502-3	[1] KOLO ZEBATE 39 do BGA452	1	
018	962151-6	[1] ZEGER	1	
019	*****	*****	***	*****
020	267238-2	[1] PODKLADKA 12 do MT952/3	1	
021	213622-9	[1] O-RING 45 do 9554-58NB	1	
022	*****	*****	***	*****
023	911121-2	[1] SRUBA 4x14	4	
024	345464-4	[1] USZCZELKA do 9555-58NB	1	
025	254011-9	[1] KLIN HP1300/N800/HP1030.	1	
026	*****	*****	***	*****
027	*****	*****	***	*****
028	*****	*****	***	*****
029	*****	*****	***	*****
030	224554-5	[1] NAKRETKA TARCZY	1	
031	631714-6	[1] OBWÓD LED do BGA452	1	
032	638376-1	[1] STOJAN do 6319D/8414D SER.	1	
033	638448-2	[1] NOSNIK WIRNIKA do BGA452	1	
034	*****	*****	***	*****
035	*****	*****	***	*****
036	419566-3	[1] PRZELACZNIK do 9555-58NB	1	
037	*****	*****	***	*****
038	419519-2	[1] DZWIGNIA WYLACZNIKA do BGA452	1	
039	650579-7	[1] WLACZNIK 1246.3223 do BGA452	1	
040	*****	*****	***	*****
041	*****	*****	***	*****
042	*****	*****	***	*****
043	191971-3	[1] SZCZOTKI WEGLOWE	1	
044	643954-4	[1] POKRYWA SZCZOTKI 8443DWBE/BHP/BDF	2	
045	419518-4	[1] (MKC) POKRYWA NAKRETKI SZCZOTEK WEGLOWYCH do BGA452	2	
A01	153489-2	GRIP 36 COMPLETE	1	
A02	*****	*****	***	*****
A03	*****	*****	***	*****
A04	*****	*****	***	*****
A05	824767-4	PLASTIC CARRYING CASE	1	
A08	450128-8	BATTERY COVER	1	
E02	805459-4	SAFETY INSTRUCTION LABEL	1	

SERVICE DRAWING

MODEL NO. DGA452

